



Lineaccessori

COMPONENTE/COMPONENT

KIT RETI VANO BAULE / LUGGAGE NETS







Numero di disegno/Code number :	50901730
Nome del veicolo /Type of vehicle:	FIAT 500
Versione/ Version:	T.iT./All)
🕒 Tempo di installazione/Timing:	5' (a) + 6' (b)

ISTRUZIONI DI MONTAGGIO AD USO PROFESSIONALE, NOTICE DE POSE A USAGE PROFESSIONNEL
FITTING INSTRUCTIONS FOR PROFESSIONAL FITTERS, INSTRUCCIONES DE MONTAJE PARA USO PROFESIONAL,
MANUAL DE MONTAGEM PARA UTILIZAÇÃO PROFISSIONAL, MONTAGEANLEITUNG FÜR PROFESSIONNELLEN EINSATZ,
MONTAGEHANDLEIDING VOOR PROFESSIONEEL GEBRUIK



50901730.α

Lineaccessori

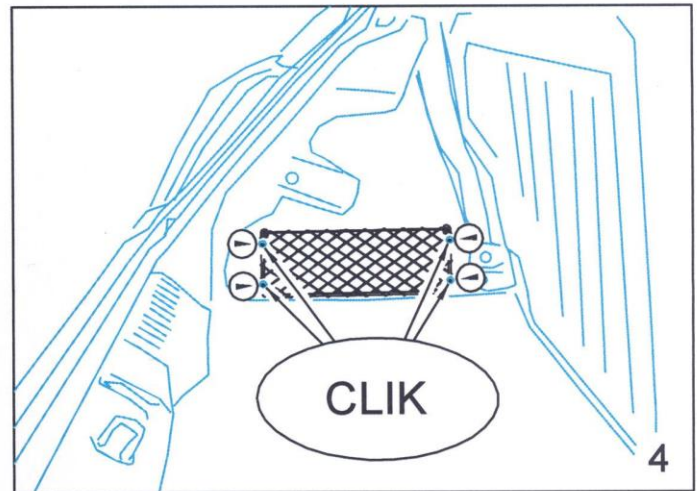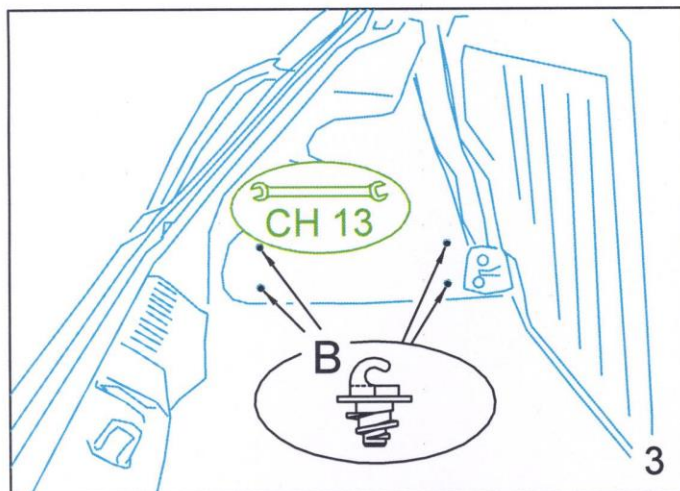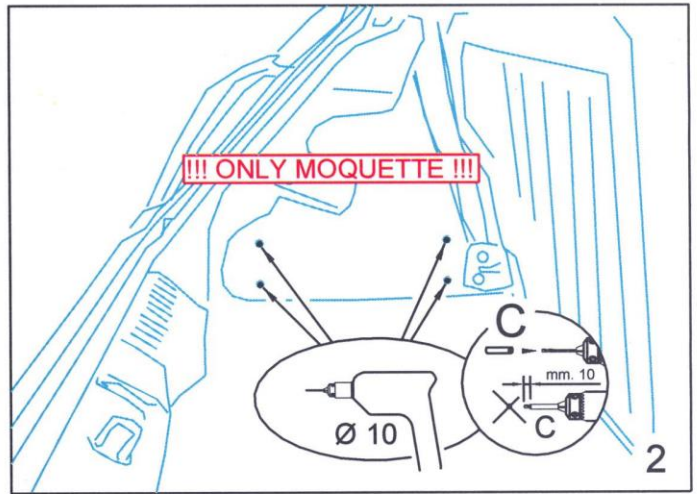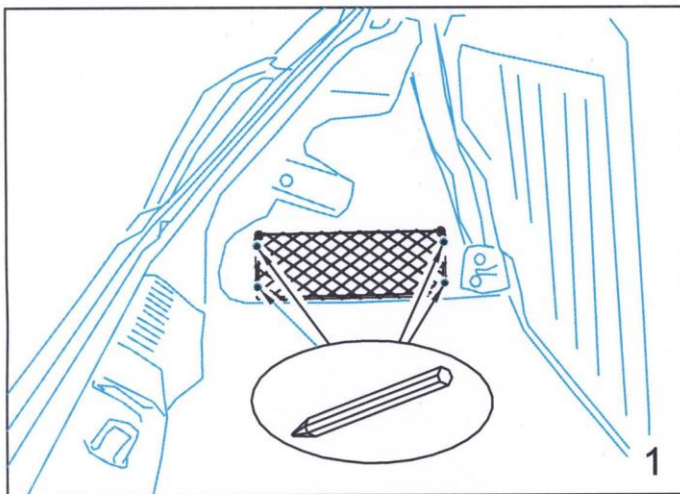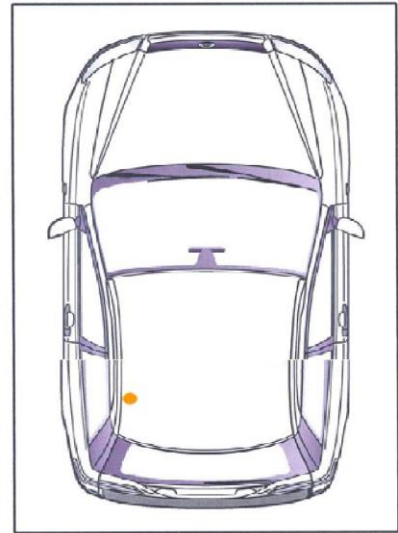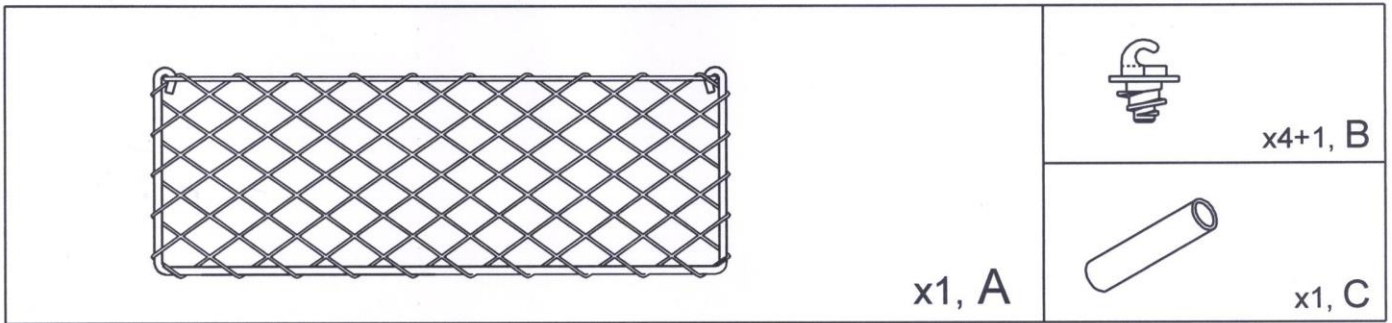

50901730.β

Lineaccessori

